

#8 SCREW


1718 W. Fullerton Ave


the anchors by tightening the two #8 screws to each clip.

TEXTURED WAL

904-LCMG7-24V-03


LCMG7-24V-

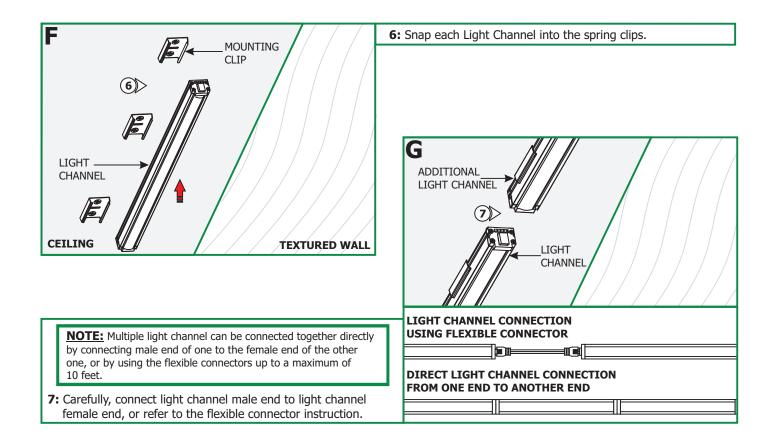

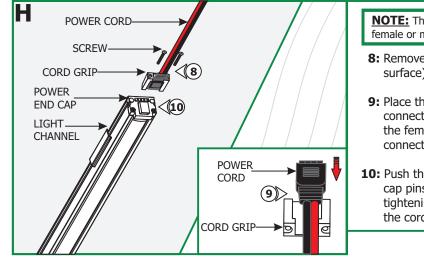


**NOTE:** The power feed cable can be mounted to either the female or male end of the channel.

 - 8: Remove the two bottom screws (closest to the mounted surface) of the selected power end cap.
- **9:** Place the male end of the power cord in the cord grip if connecting to the female end of the light channel, or place the female end of the power cord in the cord grip if connecting to the male end of the light channel.
- **10:** Push the cord completely into the light channel power end cap pins and secure the cord grip to the light channel by tightening the two screws (provided with cord grip) through the cord grip into the light channel power end cap.



**12:** Follow the instructions provided with the power supply to power up the light channel.

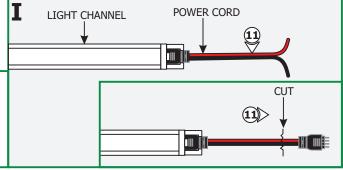

## **Replacing the Soft Strip**

