

1718 W. Fullerton Ave Chicago, IL 60614 Tel: 773-770-1195 Fax: 773-935-5613 www.edgelighting.com info@edgelighting.com



Operational Guide for Controller Dial with Power Supply

Selecting Modes

Configure your CDP by setting the DIP switches on the front:




COLOR MODE



CHASE MODE

NOTE: The DIP switches must remain accessible after installation. When making changes in the DIP switch settings, disconnect and reconnect the power supply to activate new settings.

Operating CDP

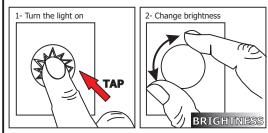




Advanced Operation for Color Mode





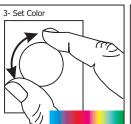



Advanced Operation for Chase Mode







