

## CAUTIONS

1. To avoid the possibility of electrical shock, turn off power supply before installation or servicing.


## NOTES

1. Use this template to align track for 90° turns. See **Figure 1** for proper fit of cable to corner.
2. Cable must extend 1-3/4" (45 mm) beyond end of track before making 90° turn. This will assure proper fit of Corner Cover.
3. Track must be mounted no less than 1/8" (3mm) from wall for proper fit of Corner Cover or End Cover.

## INSTALLATION

1. Cut along dotted line and place template in corner.
2. Align track in positions noted so that track ends are exactly 2-5/8" (67 mm) from corner. Track must be mounted no less than 1/8" (3 mm) from wall for proper fit of Corner Cover or End Cover.
3. Secure track with screws.
4. Place cable in one track section.
5. Make a 90° turn with cable, bending the cable slightly on its side, making sure that the bend in the cable is 1-3/4" (45mm) beyond the end of the track. See **Figure 1**.
6. Place cable in next track section.
7. Snap Corner Cover over two track sections. See **Figure 1**.
8. Snap End Cover at end of track. See **Figure 2**.

**Figure 1**  
Proper fit of cable to corner

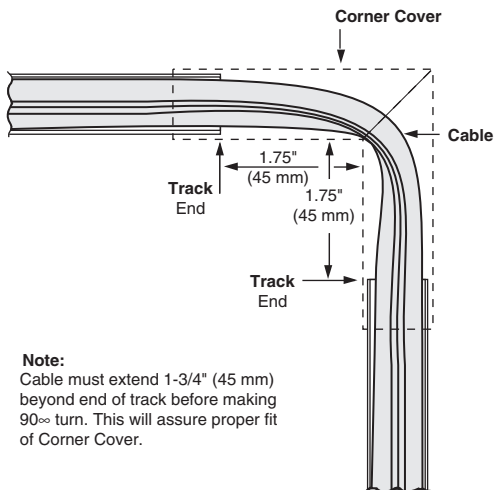

**Figure 2**  
Placement of ceiling hole

